


Point Cloud Display Settings

Settings are stored per view

Adjusting the Point Size

The point size used for rendering the point cloud can be adjusted. Three predefined options are available: **Automatic**, **Medium**, and **Fine**.

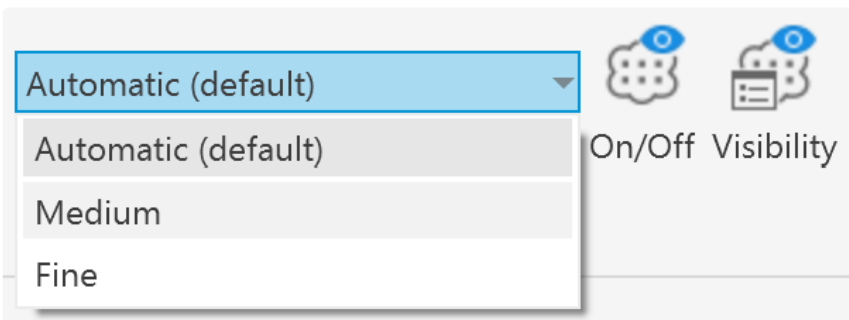

Fine

The **Fine** setting uses a small point size similar to the point cloud rendering used to display ReCap point clouds in Revit. This can often create the effect that the point cloud becomes visually sparse, allowing the viewer to see through it so that surfaces become difficult to recognize.



Automatic (default)

The **Automatic** setting attempts to choose a point size that keeps surfaces such as walls visually closed and easier to interpret, while **Medium** provides a compromise between the two extremes.